



F-18 PITAGONE

THE MODULAR ANTI-RAM VEHICLE BARRIERS

- UNIQUE, MOBILE SOLUTION AGAINST RAM VEHICLES
- ULTRA-FAST ASSEMBLY, DOES NOT REQUIRE ANY TOOLS
- D LONG LIFE CYCLE, MINIMAL MAINTENANCE
- EASY STORAGE AND TRANSPORT, DELIVERED WITH ITS RACK INCLUDED
- ENERGY AND LATERAL SHOCK ABSORPTION



DEKRA

IVECO .

SH 19.15

IT HAS BEEN DESIGNED TO PROTECT CROWDS OF RAM VEHICLES DURING GATHERINGS OF PEOPLE.

ANTI-RAM VEHICULE BARRIERS PITAGONE F-18

This unique mobile barrier has been designed to protect crowds of ram vehicles during gatherings of people. the PITAGONE F-18 modular barrier makes it possible to stop a 7.5 tonne truck launched at 48 km / h or a 12 tonne truck launched at 42 km / h.

Made up of compact elements that are easy to store and transport, it takes only 15 minutes to assemble and install and does not require any special tools. It also has a long service life and requires minimal maintenance.

Thanks to its quick and easy assembly, the PITAGONE F-18 modular barrier adapts to all surfaces and terrains (including sidewalks and other gradients).

It can be moved very quickly, in order to clear the way for priority vehicles (ambulances, fire trucks, etc.).

PITAGONE F-18 is the only modular barrier in the world has been doubly certified IWA14 and PAS 68.











F-18



SPECIFICATIONS


Height	100 cm
Width	9 cm
Depth	104 cm
Total weight	38.5 kg
Distance between the modules	Liaison bars in position 25 : 43.5 cm Liaison bars in position 50 : 68 cm

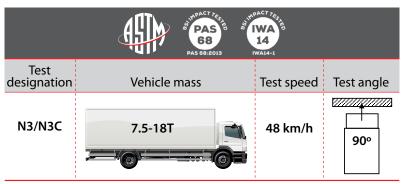


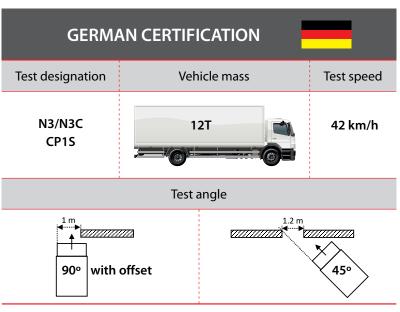

RACK F-18

- Resistant to the harshest usage conditions
- An operational productivity timesaver
- More efficient use of space in your warehouses
- Significant reduction in transport costs
- Quick and easy to handle
- Prevents: Theft, breakage, loss
- Dimensions : 137 cm x 112 cm x 117 cm

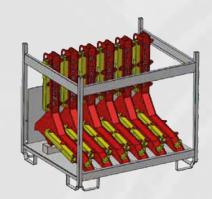

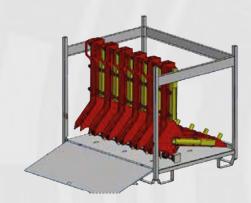

HTDS

Parc d'Activités du Moulin de Massy - 3 rue du Saule Trapu

BP246 - 91882 Massy Cedex France

Tel: +33 (0) 164 86 28 28 - Fax: +33 (0) 169 07 69 54 - info@htds.fr - www.htds.fr

HTDS Algeria: +213 232 384 01/02 HTDS Morocco: +212 222 749 59 HTDS Egypt: +202 229 053 06 HTDS Lybia: +218 91 69 50 70 8 HTDS Madagascar : +261 34 40 664 72 HTDS Tunisia : +216 70 836 961

